 


**SAMSUNG**

**THREE-CD CHANGER  
MINI-COMPACT SYSTEM  
CD-R/RW PLAYBACK  
MAX-B420/B450**

**Instruction Manual**

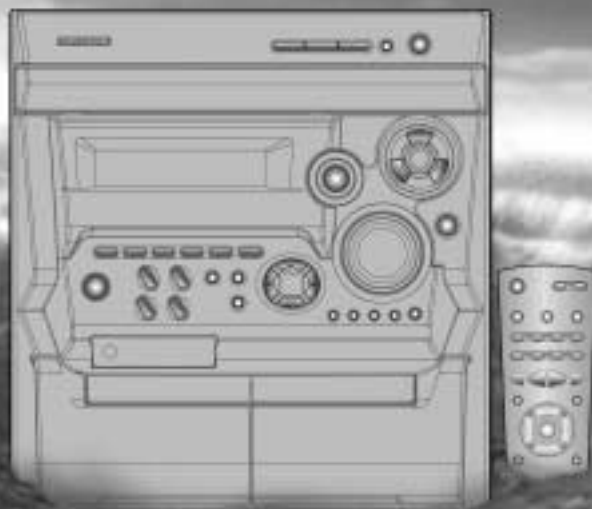 


# Safety Warnings

CLASS 1 LASER PRODUCT  
 KLASSE 1 LASER PRODUKT  
 LUOKAN 1 LASER LAITE  
 KLAS 1 LASER APPARAT  
 PRODUCTO LASER CLASE 1

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

## CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

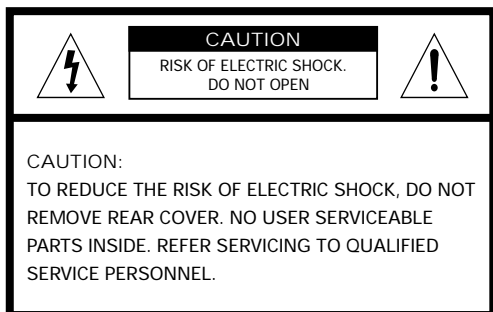

This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.



This symbol alerts you to important operating and maintenance instructions accompanying the unit.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

## CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

## Wiring the Main Power Supply Plug(UK Only)

### IMPORTANT NOTICE

The main lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and if it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover removed. If the cover is detachable and a replacement is required, it must be of the same colour as the fuse fitted in the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a main socket as there is a risk of shock hazard from the bared flexible cord.

Never attempt to insert bare wires directly into a main socket. A plug and fuse must be used at all times.

### IMPORTANT


The wires in the main lead are coloured in accordance with the following code:–

BLUE = NEUTRAL      BROWN = LIVE

As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:–

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK.

The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

**WARNING:** DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL  , OR COLOURED GREEN OR GREEN AND YELLOW.

◆ SAFETY WARNINGS .....	2
◆ INSTALLING YOUR MINI-COMPACT SYSTEM .....	
■ Front Panel View .....	4
■ Remote Control .....	5
■ Rear Panel View .....	6
■ Where to Install Your Mini-Compact System .....	7
■ Connecting your System to the Power Supply .....	7
■ Connecting the Loudspeakers .....	7
■ Connecting the AM (MW)/LW Aerial .....	8
■ Connecting the FM Aerial .....	8
■ Inserting Remote Control Batteries .....	9
■ Viewing the Various Functions on Your System and Dim Out for Display .....	9
■ Setting the Clock .....	9
◆ CD-PLAYER .....	
■ Loading and Changing Compact Discs .....	10
■ Listening to a Compact Disc .....	10
■ Selecting a CD in the Disc changer .....	11
■ Selecting a Track .....	11
■ Searching for a Specific Music Passage on a CD .....	11
■ Shuffle Play Function .....	11
■ Repeating One or All Tracks on the Compact Discs .....	12
■ Programming the Order of Playback .....	12
■ Checking or Changing Programmed Tracks .....	13
◆ TUNER .....	
■ Searching for and Storing the Radio Stations .....	13
■ Selecting a Stored Station .....	14
■ Improving Radio Reception .....	14
■ About RDS broadcasting .....	15
■ About RDS DISPLAY function .....	15
■ PTY (Program Type) indication and PTY-SEARCH function .....	16
◆ TAPE DECK .....	
■ Listening to a Cassette .....	17
■ CD Synchro Record Feature .....	17
■ Recording a Compact Disc .....	17
■ Recording a Radio Programme .....	18
■ Copying a Cassette (Dubbing) .....	18
■ Tape Counter .....	18
◆ OTHER FUNCTIONS .....	
■ Timer Function .....	19
■ Cancelling the Timer .....	20
■ Mute Function .....	20
■ Selecting an Equalizer Preset .....	20
■ Power Sound Function .....	20
■ Setting the System to Switch off Automatically .....	21
■ Super Bass Sound .....	21
■ Connecting Headphones .....	21
■ Connecting to an External Source .....	22
◆ RECOMMENDATIONS FOR USE .....	
■ Safety Precautions .....	22
■ Cleaning Your Mini-Compact System .....	23
■ Precautions When Using Compact Discs .....	23
■ Precautions When Using Audio Cassettes .....	23
■ Before Contacting the After-Sales Service .....	23
■ Technical Specifications .....	24

## Symbols



Press



Push



 
Important



Note


## Front Panel View

GB

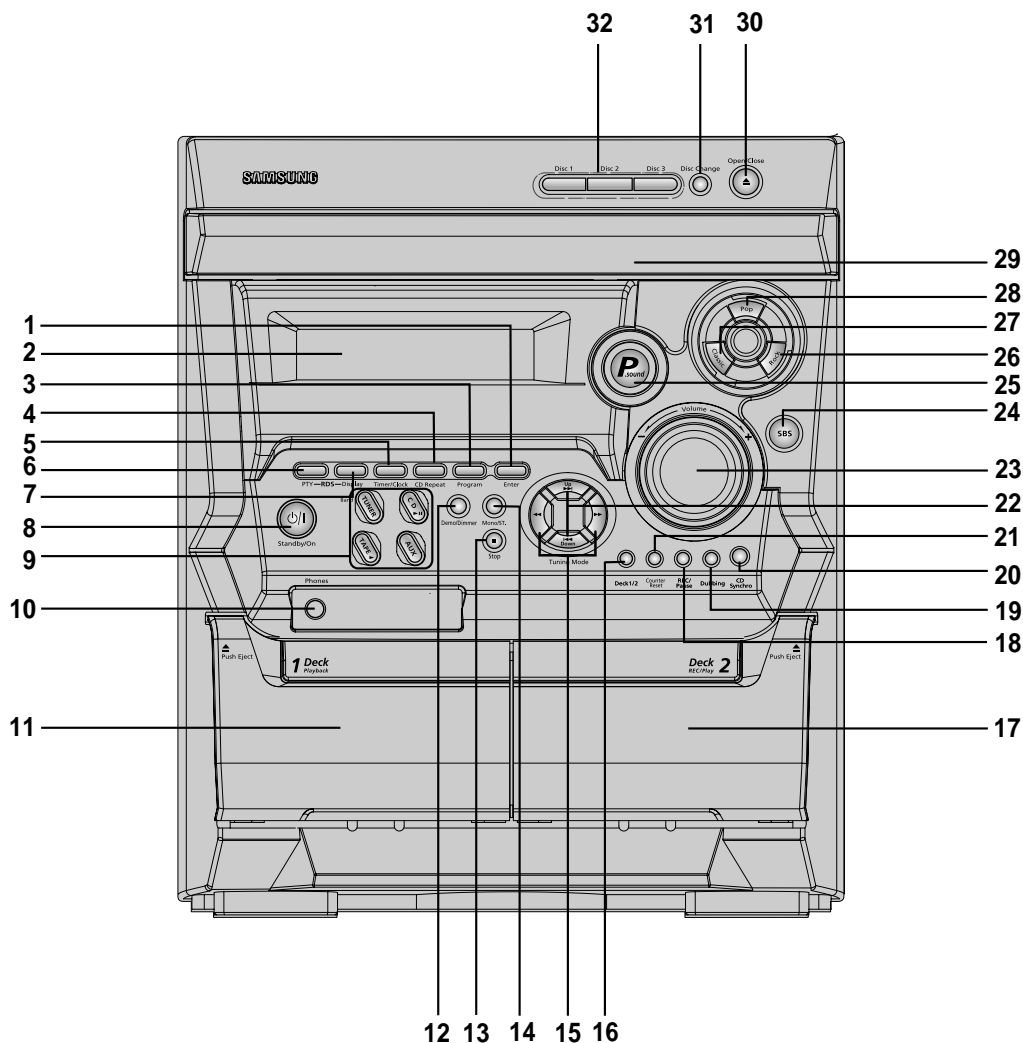

- |                               |                              |
|-------------------------------|------------------------------|
| 1. Enter                      | 17. Cassette Deck 2          |
| 2. Window Display             | 18. REC/Pause                |
| 3. Program                    | 19. TAPE Normal Dubbing      |
| 4. CD Repeat                  | 20. CD Synchro Recording     |
| 5. Timer/Clock                | 21. Counter Reset            |
| 6. PTY (RDS)                  | 22. Skip Function buttons    |
| 7. Display (RDS)              | 23. Volume                   |
| 8. Standby/On                 | 24. S.Bass                   |
| 9. Function Selection buttons | 25. Power Sound              |
| 10. Headphone Jack Connector  | 26. EQ Preset Rock           |
| 11. Cassette Deck 1           | 27. EQ Preset Classic        |
| 12. Demo/Dimmer               | 28. EQ Preset Pop            |
| 13. Stop button               | 29. Compact Disc Compartment |
| 14. Mono/ST.                  | 30. CD Open/Close            |
| 15. Search Function buttons   | 31. Disc Change              |
| 16. Deck 1/2                  | 32. Disc Selection buttons   |




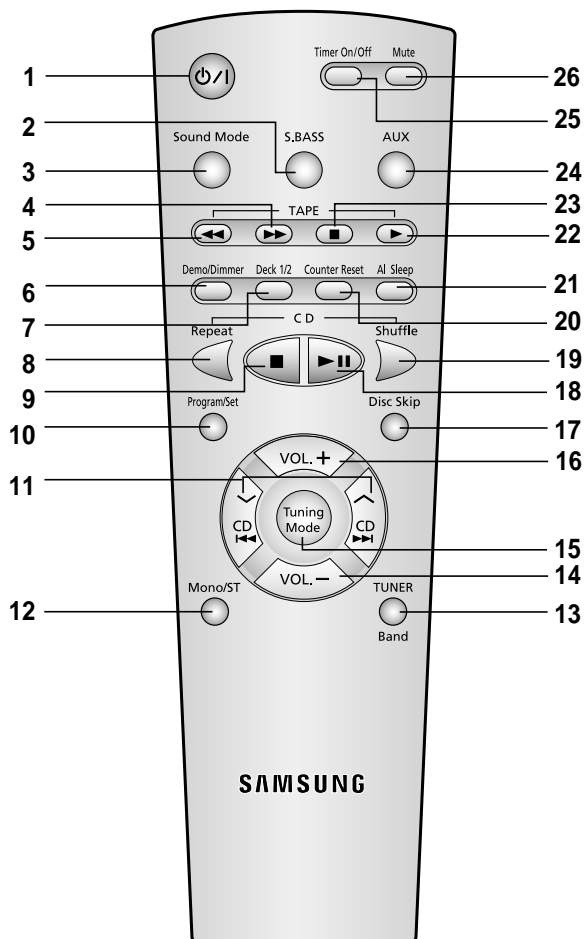 

- |  |                                |
|--|--------------------------------|
| 1. Standby/On                              | 14. Volume Decrease            |
| 2. S.BASS                                  | 15. Tuning Mode(MANUAL,PRESET) |
| 3. Sound Mode                              | 16. Volume Increase            |
| 4. TAPE Fast-Forward                       | 17. Disc Skip                  |
| 5. TAPE Rewind                             | 18. CD Play/Pause              |
| 6. Demo/Dimmer                             | 19. CD Shuffle Play            |
| 7. Deck 1/2                                | 20. Counter Reset              |
| 8. CD Repeat                               | 21. AI Sleep                   |
| 9. CD Stop                                 | 22. TAPE Play                  |
| 10. Program/Set                            | 23. TAPE Stop                  |
| 11. CD Track or Radio Station Search(Skip) | 24. AUX                        |
| 12. Mono/ST.                               | 25. Timer On/Off               |
| 13. TUNER Band                             | 26. Mute                       |

## Rear Panel View

 GB

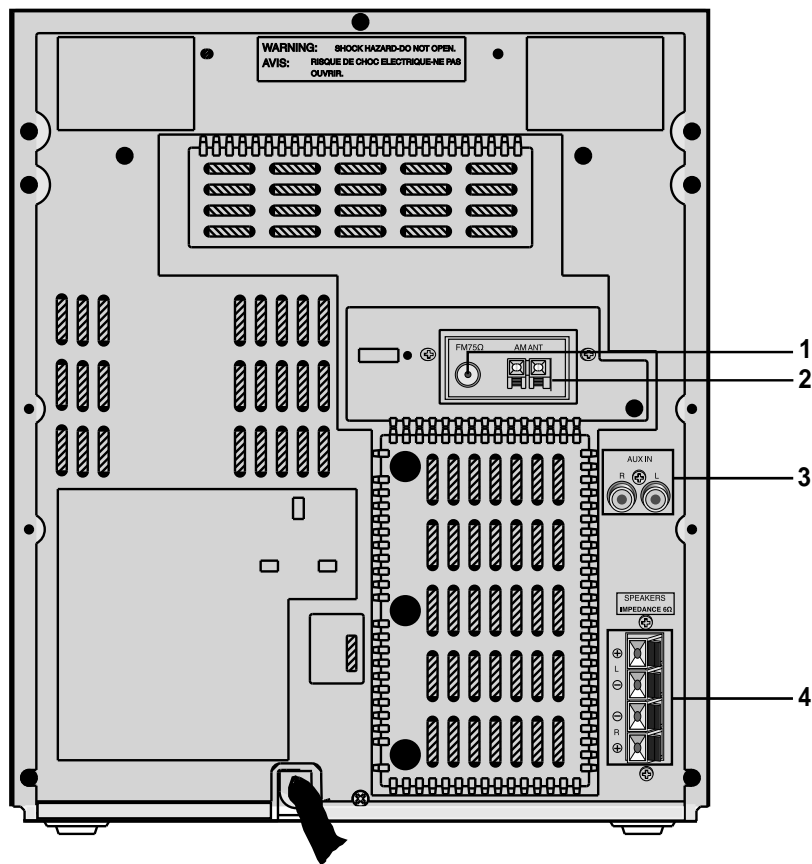


1. FM Aerial Connector Terminal
2. AM Aerial Connector Terminal
3. AUX-Input
4. Loudspeaker Connector Terminals

## Where to Install Your Mini-Compact System

 To take full advantage of your new mini-compact system, follow these installation instructions before connecting the unit.

- ◆ Install the system on a flat, stable surface.
- ◆ Never place this unit on carpeting.
- ◆ Never place this unit in an outdoor area.
- ◆ Maintain an open space of approximately 6 inches (15 cm) on the sides and rear of the system, for ventilation purposes.
- ◆ Make sure that you have enough room to open the compact disc compartment easily.
- ◆ Place the loudspeakers at a reasonable distance on either side of the system to ensure good stereo sound.
- ◆ Direct the loudspeakers towards the listening area.
- ◆ For optimum performance, make sure that both speakers are placed at an equal distance above the floor.

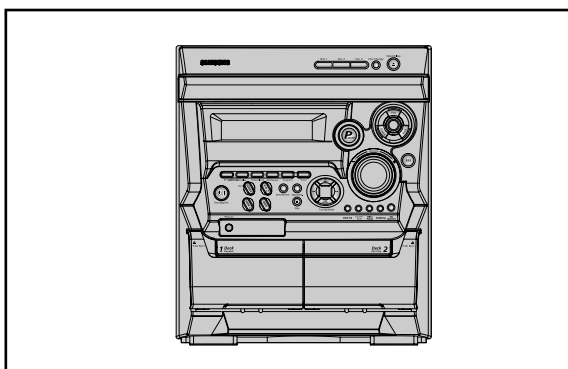


## Connecting your System to the Power Supply

The main lead must be plugged into an appropriate socket.

- ⚡ Before plugging your system into a main socket, you must check the voltage.

 - 1 Plug the main lead (marked **AC Cord** on the rear of the system) into an appropriate socket.
- 2 Press the **Standby/on** button to switch your mini-compact system on.

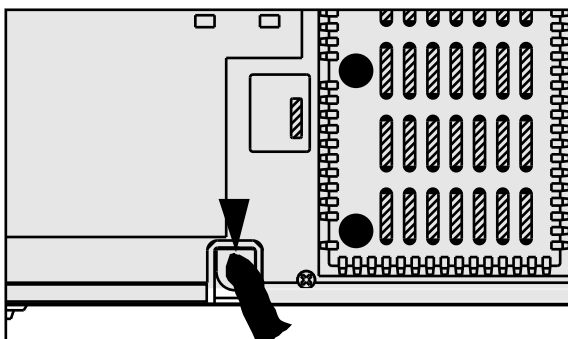

## Connecting the Loudspeakers

GB

The loudspeaker connector terminals are located on the rear of the system.

There are four terminals on the system:

 
- ◆ Two for the left speaker (marked L)
- ◆ Two for the right speaker (marked R)

To achieve the correct sound quality, connect the:

- ◆ Red wire to the + terminals
- ◆ Black wire to the – terminals

- 1 To connect a wire to a terminal, push the tab as far as it will go:
  - ◆ To the right on the system
- 2 Insert the wire, up to the plastic sheathing, in the hole.
- 3 Push the tab back:
  - ◆ To the left on the system, until it clicks into place
  - ◆ To the top on the loudspeaker

**Result:** The wire is pinched and held firmly in place.
- 4 Repeat the operation for each wire.

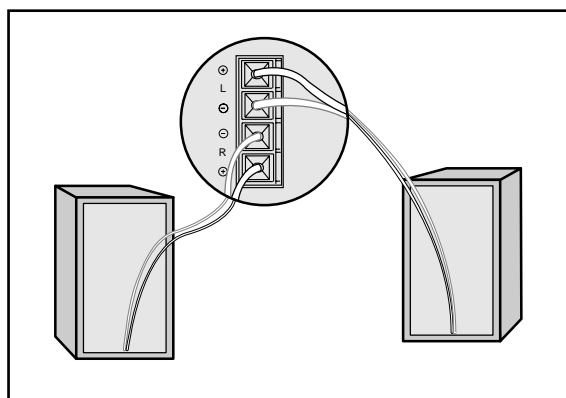

## Connecting the AM (MW)/LW Aerial

 
GB

The AM aerial (for long and medium waves) can be:

- ◆ Placed on a stable surface
- ◆ Fixed to the wall (you must first remove the base)

The **AM** connector terminals are located on the rear of the system and are marked **AM**.



- 🔊 To avoid noise interference, check that the loudspeaker wires do not run close to the aerial wires. Always keep them at least 2 inches (5 cm) away.

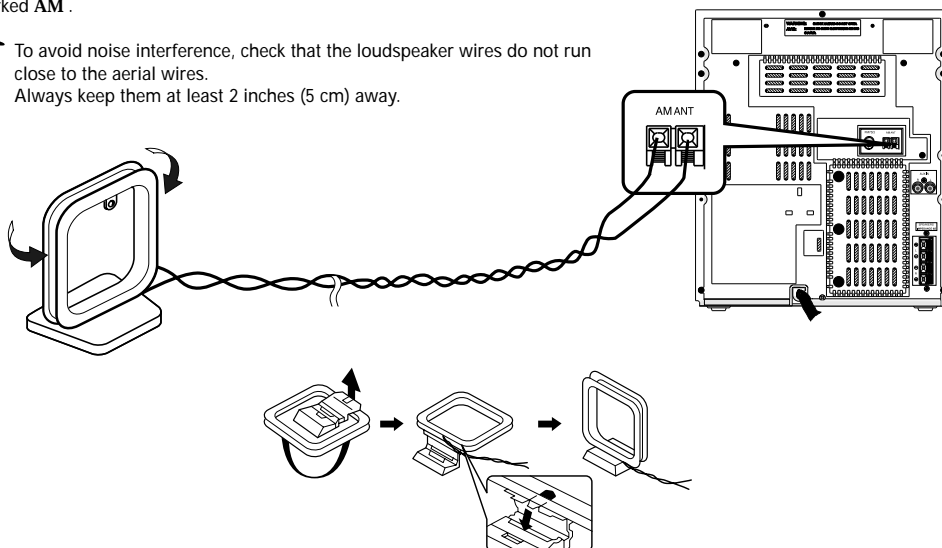

## Connecting the FM Aerial

How to connect a COAXIAL TYPE aerial.

  
- ◆ Connect a 75Ω antenna to the **FM** antenna terminal.
- ◆ Plug the connector on the **FM** aerial supplied into the coaxial socket (75Ω) marked **FM** on the rear of the system.
- ◆ Follow the instructions given on Page 13 to tune into a radio station, and determine the best position for the aerial.
- ◆ If reception is poor, you may need to install an outdoor aerial.  
To do so, connect an outdoor **FM** aerial to the **FM** socket on the rear of the system using a 75Ω coaxial cable (not supplied).

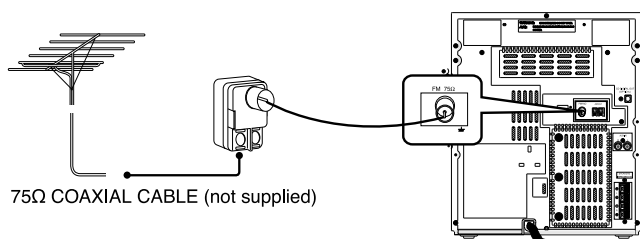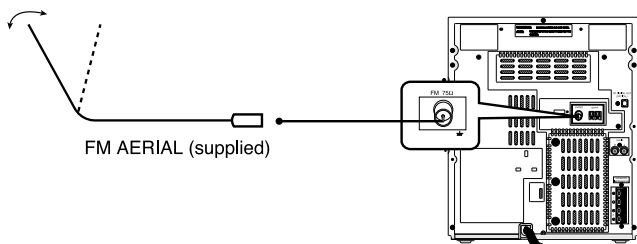


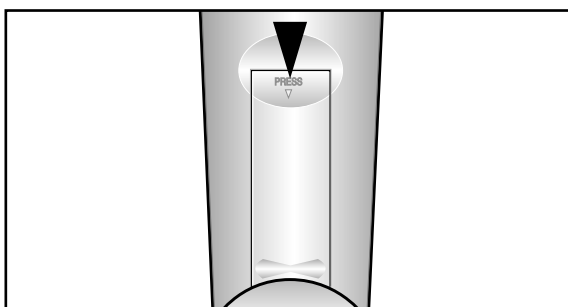 
## Inserting Remote Control Batteries

Insert or replace remote control batteries when you:

- ◆ Purchase the mini-compact system
- ◆ Find that the remote control is no longer operating correctly

 When replacing the batteries, use a new set of batteries and never mix alkaline and manganese batteries.


- 1 Place your thumb on the position marked  on the battery compartment cover (rear of the remote control) and push the cover in the direction of the arrow.
- 2 Insert two AAA, LR03 or equivalent batteries, taking care to respect the polarities:
  - ◆ + on the battery against + on the remote control
  - ◆ - on the battery against - on the remote control
- 3 Replace the cover by sliding it back until it clicks into position.



## Demo/Dimmer function

 All functions available on the system can be viewed on the display and the display's brightness can be switched between "on" and "off".


- 1 Press the **Demo/Dimmer** button.  
Result: All functions available on the system appear on the front panel display.
- Each of these are explained in detail in this guide. Please refer to the relevant section.
- 2 Press the **Demo/Dimmer** button again.  
Result: The Dimmer function is selected and the display darkens.
  - 3 Press the **Demo/Dimmer** button once again to brighten the front panel display.
- A display brightness control can only be performed while the system power is on.

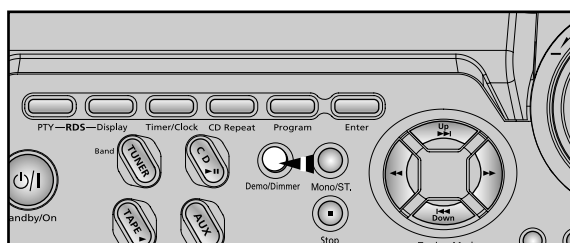

## Setting the Clock

 
Your system is equipped with a clock which allows you to turn your system on and off automatically. You should set the clock:

- ◆ When you purchase the mini-compact system
- ◆ After a power failure
- ◆ After unplugging the unit

 ◆ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1 Switch the system on by pressing **Standby/on**.
  - 2 Press **Timer/Clock** twice.  
Result: **CLOCK** is displayed.
  - 3 Press **Enter**.  
Result: The hour flashes.
- | To...                    | Press the... |
|--------------------------|--------------|
| Increase the hours ..... | Tuning Up    |
| Decrease the hours ..... | Tuning Down  |
- 5 When the correct hour is displayed, press **Enter**.  
Result: The minutes flash.
- | To...                      | Press the... |
|----------------------------|--------------|
| Increase the minutes ..... | Tuning Up    |
| Decrease the minutes ..... | Tuning Down  |
- 7 When the correct time is displayed, press **Enter**.  
Result: The clock starts and is displayed, even when the system is in standby mode.

- ◆ You can display the time, even when you are using another function, by pressing **Timer/Clock** once.
- ◆ You can also use **Program/Set** button on the remote control to instead **Enter** button in step 3,5,7.

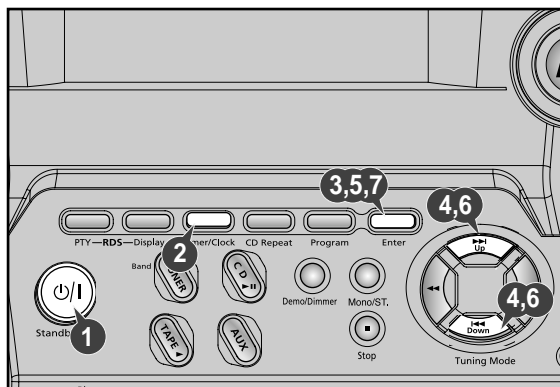

## Loading and Changing Compact Discs

The CD disc changer can contain up to three 12 cm or 8 cm compact discs without using an adapter.

⚠ Never force the compact disc carousel when opening and closing the compartment.  
Never press down or place objects on the carousel.

➤ Always treat your compact discs with care; refer, if necessary, to the section entitled **"Precautions When Using Compact Discs"** on page 23.

- 1 Switch the system on by pressing **Standby/on**.
- 2 Press the **Open/Close** (▲) button on the front panel.  
**Result:** The compartment opens.
- 3 Place one or two discs in the front slots of the carousel, with the label on the discs facing upwards.  
⚠ Check that the compact disc has been correctly inserted in the holder before closing the compartment.
- 4 If you wish to load a third compact disc, press the **Disc Change** button on the front panel (or **Disc Skip** on the remote control).  
**Result:** The carousel rotates by 120°.
- 5 Close the compartment by pressing the **Open/Close** (▲) button again.  
➤ If you wish to start playing a disc directly, you can also proceed as follows.

 
To play...	Press...
Disc 1 .....	CD (▶  ) or Disc 1
Disc 2 .....	Disc 2
Disc 3 .....	Disc 3

**Result:** The compartment closes automatically and the disc selected starts playing.

- 6 To change or unload the compact disc changer, repeat Steps 2 to 5.

⚠ Keep the compartment closed whenever you are not using it, to prevent dust from entering.

➤ ♦ You can load or unload compact discs when the radio, tape or auxiliary source function is selected.

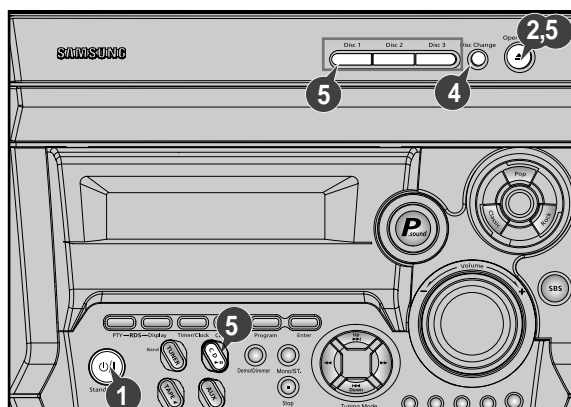

## Listening to a Compact Disc

 
This unit has been designed to playback the CDs: Audio CD, CD Text, CD-R and CD-RW.

When you have loaded at least one compact disc into the player, you can start listening to it.

Continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit.

- 1 Switch the system on by pressing **Standby/on**.
- 2 Select the CD function by pressing **CD** (▶||) .
- 3 Load one or more discs.
- 4 Press **CD** (▶||) on the front panel or ▶|| on the remote control.  
➤ If you have loaded more than one compact disc, they will be played in turn.
- 5 Adjust the volume as required by:  
♦ Turning the **Volume** knob on the front panel  
or  
♦ Pressing the **VOL. +** or **-** buttons on the remote control
- 6 To pause temporarily during playback, press **CD** (▶||) .  
➤ Press **CD** (▶||) again to continue disc playback.
- 7 Press ■ when you have finished.

- ♦ When playing a disc, you can load new discs without stopping the current one. To do so, open the compartment by pressing **Disc Change** and load new discs in the other two vacant slots (not the one containing the disc that you are playing). You cannot rotate the carousel during playback.
- ♦ When no discs are loaded, the **"NO DISC"** indication is displayed.
- ♦ The CD player stops automatically after playing the three discs, if the **CD REPEAT** function has not been selected.

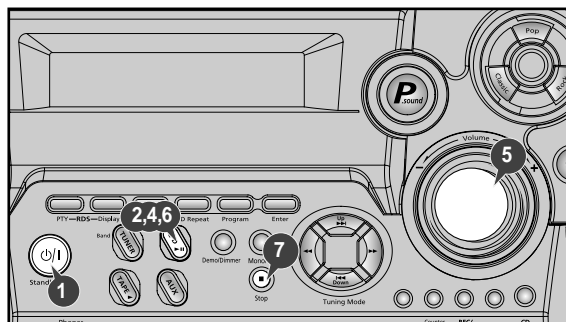

⚠ **When playing a CD-R or CD-RW**  
**User-edited CD-Rs (Recordable) and CD-RWs (Rewritable) can be played back only if they are already "finalized".**

- ♦ You can play back your original CD-Rs or CD-RWs recorded in music CD format. (However, they may be played back depending on their characteristics or recording conditions.)
- ♦ Before playing back CD-Rs or CD-RWs, read their instructions or caution carefully.
- ♦ Some CD-Rs or CD-RWs may not be played back on this unit because of their disc characteristics, damage or stain on them, or if the player's lens is dirty.
- ♦ CD-RWs may require a longer readout time. (This is caused by the fact that reflectance of CD-RWs is lower than for regular CDs.)


## Selecting a CD in the Disc changer

 The CD function is automatically selected when Disc Skip is pushed.

To select a specific disc, press the corresponding Disc (1, 2, 3) button on the front panel or Disc Skip on the remote control, until the required disc indicator flashes.

**Result:** All the discs will be played in turn, starting with the one selected.

- If you wish to play the current disc only, press CD Repeat on the front panel one or more times, until 1 CD is displayed.
- ♦ If you use the Disc (1, 2, 3) function when listening to the radio or to a tape, the system switches automatically to the CD mode.
- ♦ If the disc selected is not loaded, the next disc is played automatically.

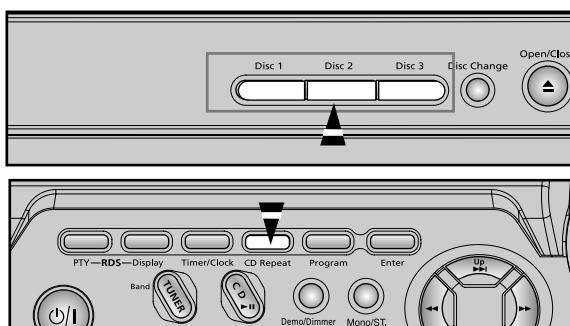


## Selecting a Track

You can select the track you wish to listen to, either when the compact disc player is stopped or when a disc is playing.

**To start playback at the beginning of the...** Press the ◀◀ and ▶▶ ...

 - Next track ..... Press ▶▶ once
- Current track ..... Press ◀◀ once
- Previous track ..... Press ◀◀ twice
- Track of your choice ..... The appropriate number of pressing the ◀◀ and ▶▶

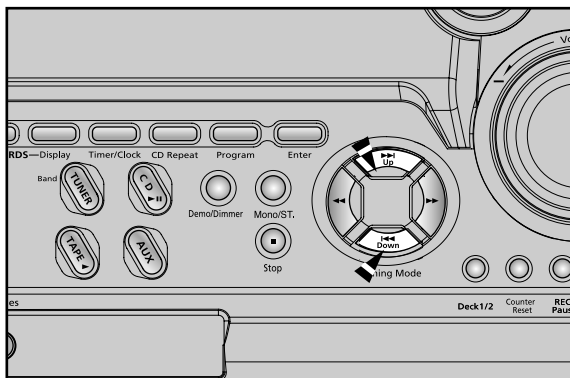


## Searching for a Specific Music Passage on a CD

When listening to a compact disc, you can quickly search for a specific music passage on a track.

- It is recommended that you turn the volume down before using this function.

To search through the tracks...	Press and hold down...
Forwards .....	▶▶ for at least one second
Backwards .....	◀◀ for at least one second

 
You can also press and hold down ◀◀ / ▶▶ on the front panel to auto search through the tracks.

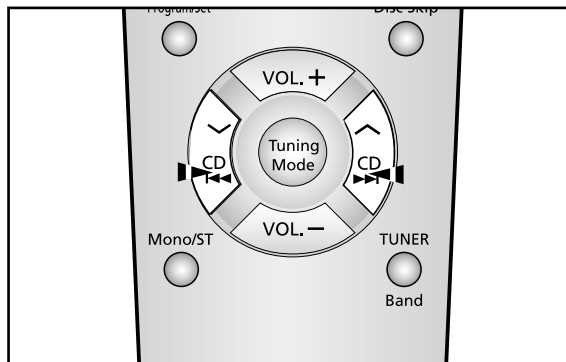

## Shuffle Play Function

You can listen to the tracks on a compact disc in a different order each time, as the various tracks will be selected automatically in a random sequence.

 - 1 Press the **Shuffle** button.  
**Result:** The Shuffle indication appears and all the tracks are played in a random order. Both the track number and the playing time are displayed.
  - 2 When playing tracks in a random order, you can:
    - ♦ Move on to the next track (selected at random) by pressing ▶▶.
    - ♦ Search quickly for a specific point in the current track by pressing ◀◀.
  - 3 When you have finished the random playback, press ■ or press the **Shuffle** button again.
- Repeat and CD Synchro function are not available in Shuffle playing mode.

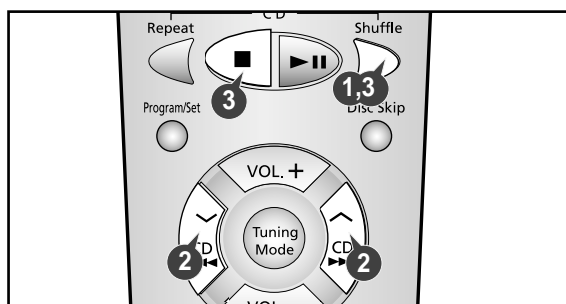


## Repeating One or All Tracks on the Compact Discs

You can repeat indefinitely:

- ◆ A specific track on a compact disc.
- ◆ All tracks on the compact disc selected.
- ◆ All discs loaded in the carrousel

 - | To repeat...                         | Press Repeat on the Front Panel one or more times until... |
|--------------------------------------|--|
| The current track indefinitely ..... | <b>REPEAT 1</b> is displayed                               |
| The selected disc .....              | <b>REPEAT 1 CD</b> is displayed                            |
| All discs loaded .....               | <b>REPEAT ALL CD</b> is displayed                          |
- When you wish to stop the Repeat function, press **Repeat** until **ALL CD** or **1 CD** is displayed, or press **■**.

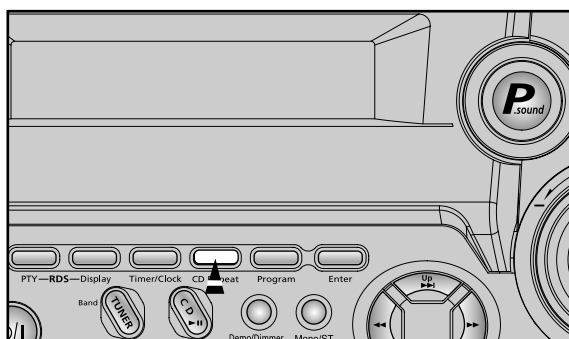

## Programming the Order of Playback

You can decide:

- ◆ The order in which you listen to the tracks on the discs loaded
- ◆ Which tracks you do not wish to listen to
- ◆ You can programme up to 24 tracks.
  - ◆ You must stop the compact disc player before selecting the tracks.
  - ◆ This feature can be combined with the Repeat function.

- If the CD function is selected, stop the player by pressing **■**.
- Load the selected CDs.
- Press **Program**.  
Result: The following indications are displayed:  

 
(01 = Programme No, DI = Disc No, -- = Track No on the disc)
- If necessary, select the disc containing the required track by pressing the corresponding **Disc (1, 2, 3)** button.
- Select the required track by pressing the **Up** and **Down** button:
  - ◆ Press **⏮** to move back through the tracks
  - ◆ Press **⏭** to move forward through the tracks
- Press **Program** to confirm your selection.  
Result: The selection is stored and is displayed.

- To select other tracks, repeat Steps 4 to 6.
- Press **CD (▶||)** to listen to the track selection in the order programmed.

- | To...                                   | Press the ⏮ and ⏭ ...  |
|---|--|
| Listen to the current track again ..... | Press <b>⏮</b> once  |
| Listen to the previous track .....      | Press <b>⏮</b> twice   |
| Listen to the next track .....          | Press <b>⏭</b> once  |
| Skip forwards or backwards one .....    | The appropriate number of pressing the <b>⏮</b> and <b>⏭</b> |

- To cancel the selection, press **■**.  
 ◆ Once if the compact disc player is stopped  
Result: **PRGM** is no longer displayed.

- ◆ If you open the compartment, the selection is cancelled.
- ◆ If you select the number of a disc which is not loaded or a track which does not exist on the CD, the selection skips to the next programmed track.


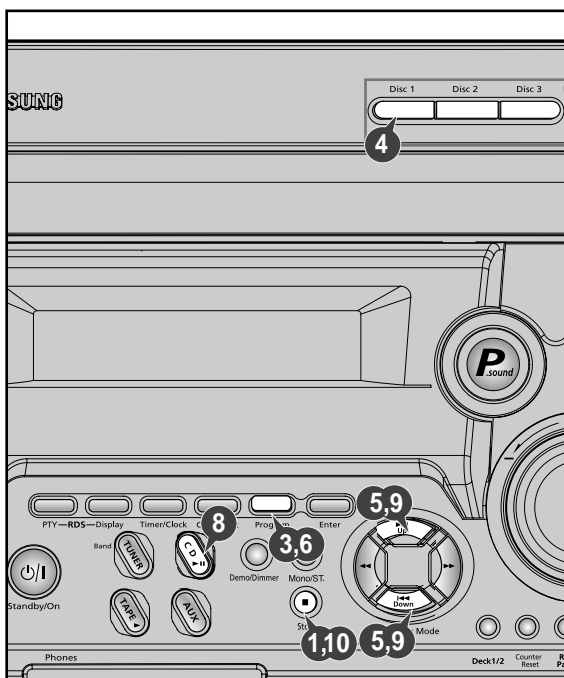




## Checking or Changing Programmed Tracks

You can check or change your selection of tracks at any time.

  - 1 Press **■** once if you have started listening to the selection.
- 2 Press **Program**.  
Result: The following indications appear: **PR CH DI** (CH = Check, 01=Program No, DI = Disc No, -- = Track No on the disc)  
➤ If you have already programmed 24 tracks, **CH** is displayed instead of **PR** when you press **Program**.
- 3 Press **Program** again.  
Result: The first track selected is displayed, together with the letter **CH**(Change).
- 4 Press **Program** one or more times until the track to be changed is displayed.
- 5 If necessary, press the corresponding **Disc (1, 2, 3)** button to change discs.
- 6 Press **◀▶** to select a different track.
- 7 Press **Program** to confirm your change.
- 8 Press **CD (▶||)** to start listening to the selection.  
Result: The first track selected is played.

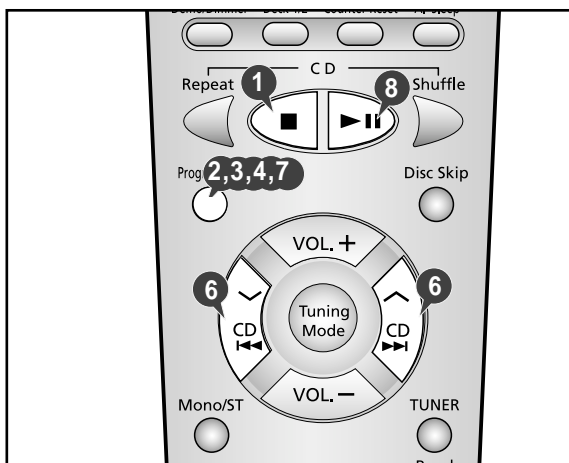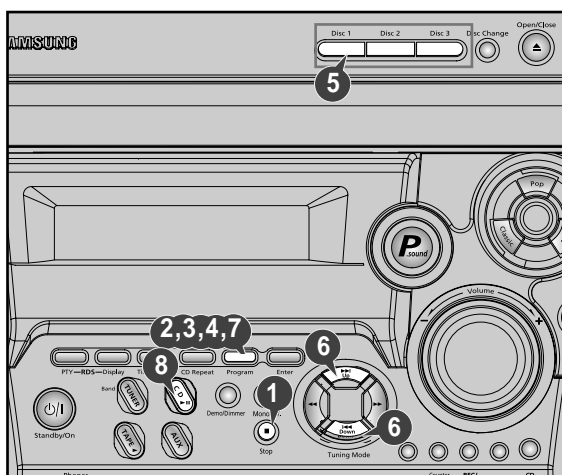

## Searching for and Storing the Radio Stations

You can store up to:

- ◆ 15 FM stations or ◆ 15 FM stations
- ◆ 8 MW stations ◆ 15 AM stations
- ◆ 7 LW stations

- 1 Switch the system on by pressing **Standby/on**.
- 2 Select the **TUNER** function by pressing **TUNER**.
- 3 Select the required frequency band by pressing **TUNER (Band)** again on the front panel or **TUNER (Band)** on the remote control.  
Result: The appropriate indication is displayed:
 

◆ <b>FM</b>	Frequency Modulation
◆ <b>AM(MW)</b>	Medium Wave
◆ <b>LW (OPTION)</b>	Long Wave
- 4 Tune in to the desired station.

### Manual tuning

- ◆ Press the **Tuning Mode** button so that the "MANUAL" indicator lights up on the front panel display.
- ◆ Press **◀▶** on the main unit to tune in to the desired station manually.  
or
- ◆ Press **Tuning** **∨** or **∧** on the remote control to do the same.

 
### Automatic tuning

- ◆ Press and hold **◀▶** on the main unit for more than 1 second so that the "AUTO" indicator lights up on the front panel display.
- ◆ Press and briefly hold **◀▶** on the main unit to begin automatic tuning.  
or
- ◆ Press and briefly hold **Tuning** **∨** or **∧** on the remote control to do the same.

- ◆ Use the manual tuning method if the automatic tuning search does not stop at the desired station because the signal is weak.

➤ For details on the Preset function, see the "Selecting a Stored Station" on page 14.

- 5 Adjust the volume by:
  - ◆ Turning the **Volume** knob on the front panel
  - or
  - ◆ Pressing the **VOL. +** or **-** buttons on the remote control
- 6 Select the FM stereo or mono mode by pressing **Mono/ST.** on the remote control.

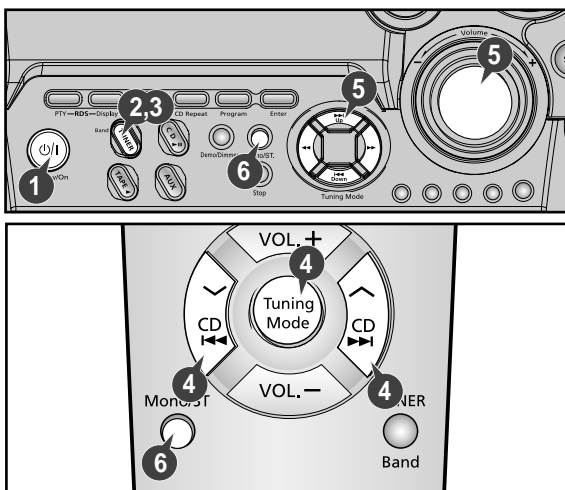

## Searching for and Storing the Radio Stations (continued)

- 7 If you do not want to store the radio station found, revert to Step 4 and search for another station.

Otherwise:

- a Press **Program**.

Result: The **PRGM** is displayed for a few seconds.

 
- b Press **Tuning Down** and **Up** to assign a programme number between 1 and 15.

- c Press **Program** to store the radio station.

Result: **PRGM** is no longer displayed and the station is stored.

- 8 To store any other radio frequencies required, repeat Steps 3 to 8.

➤ The PROGRAM function can be used to assign a new station to an existing programme number.

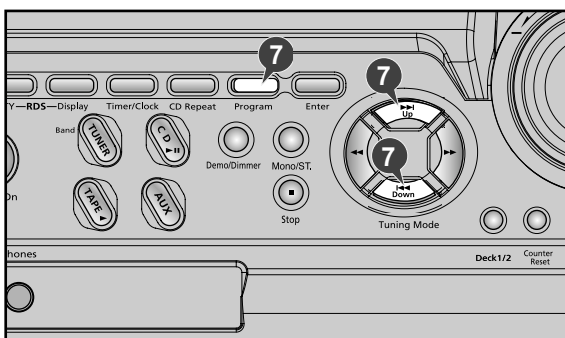


## ➤ In Tuner Mode

- ◆ In manual tuning mode, you can use ◀▶ button to manual search a radio station.
- ◆ During Tuner auto searching, press ■ button to stop auto searching.
- ◆ In Preset tuning mode, you can use ◀▶ button to search a stored radio station.

## Selecting a Stored Station

You can listen to a stored radio station as follows:

 - 1 Switch the system on by pressing **Standby/on**.
- 2 Select the TUNER function by pressing **Tuner**.
- 3 Select the required frequency band by pressing **Tuner** (Band) on the remote control or **TUNER** (Band) again on the front panel.
- 4 Press ◀▶ button on the front panel of the unit, or the **Tuning Mode** button on the remote control until **"PRESET"** is displayed.
- 5 Press ◀▶ on the front panel of the unit to select the desired station.  
or  
Select the desired station by pressing the station number stored, using the **Tuning** ▼ or ▲ button on the remote control.  
Result: The desired station is now received.

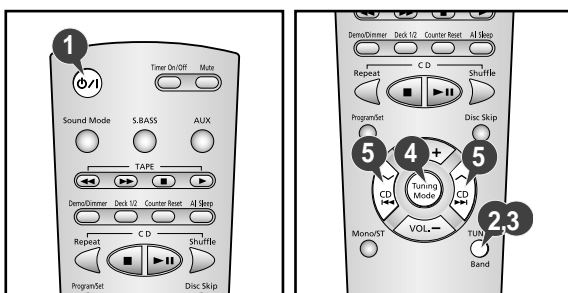


## Improving Radio Reception

You can improve the quality of radio reception by:

- ◆ Rotating the FM or AM(MW) aerial
- ◆ Testing the positions of the FM and AM(MW) aerials before fixing them permanently

 ➤ If reception from a specific FM radio station is poor, press **Mono/ST.** on the remote control to switch from stereo mode to mono. The quality of the sound will be improved.

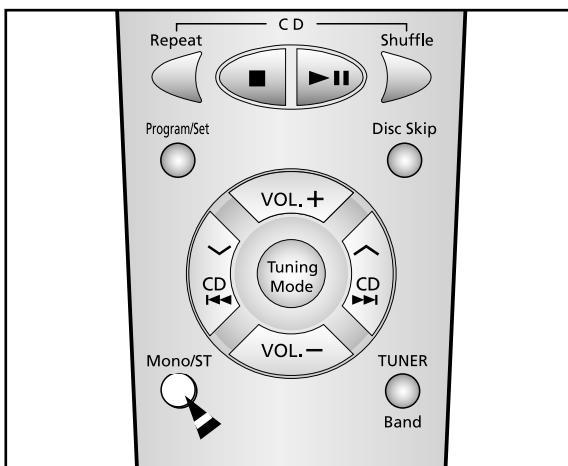

## About RDS broadcasting

This unit has the RDS (Radio Data System) function, which enables for the various information such as broadcasting station, radio text, time and 30 types of programs (News, Rock, Classic, etc.) to be received from the FM RDS station together with normal radio signal.

 
- 1 Press the **Standby/On** button.
- 2 Receive the FM radio.
  - ◆ See the radio receiving method on the **page 13**.
  - ◆ FM and frequency are shown on the display
  - ◆ If the received station transfers the RDS information, 'RDS' appears automatically on the display.
- 3 Press the **RDS Display** button to select the desired RDS mode.
  - ◆ Whenever the button is pressed, RDS mode changes as follows.

▶ PS NAME → RT → CT → Current FM frequency

◆ The RDS function is available only in FM broadcasting.

### ➤ Description on RDS function

1. PTY (Program Type) : Displays the type of programme currently being broadcast
2. PS NAME (Program Service Name) : Indicates the name of broadcasting station and is composed of 8 characters.
3. RT (Radio Text) : Decodes the text broadcast by a station (if any) and is composed of maximum 64 characters.
4. CT (Clock Time) : Decodes the real time clock from the FM frequency.
  - Some stations may not transmit PTY, RT or CT information therefore this may not be displayed in all cases.
5. TP (Traffic Program) : Indicates that the turned station is capable of transmitting traffic broadcasts.

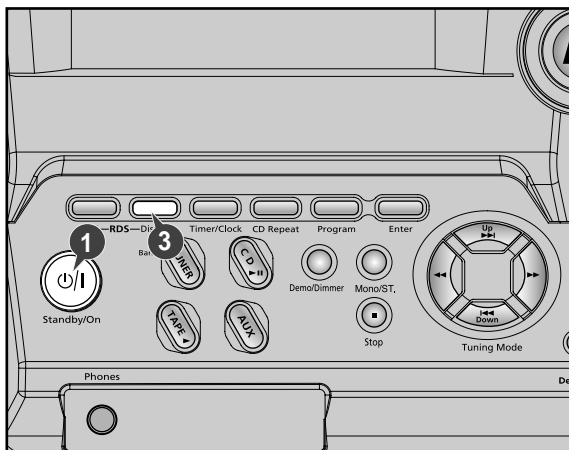

## About RDS DISPLAY function

 
### About "PS NAME" MODE

➤ Displays the name of broadcasting station.

Press the RDS Display button to select the PS NAME.

- ◆ "PS NAME" appears on the display.
- ◆ If the PS information is being received, the PS name (BBC, AFO, NDR, etc.) is shown on the display.
- ◆ If the PS information isn't received, the original FM frequency is shown.

Even though no RDS Display button is pressed, the reception of PS information ensures the PS name is displayed.

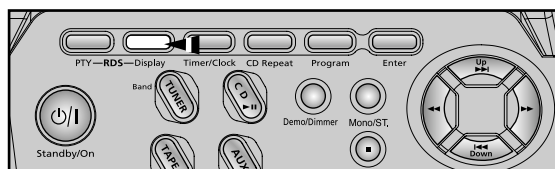


### About 'RT' MODE

➤ Displays the character transmitted from the broadcasting station.

Press the RDS Display button to select the RT MODE.

 - ◆ "RT" appears on the display.
- ◆ If the RT information is being received, the received information is shown on the display.
- ◆ If the RT information isn't received, the "NO RT" is shown. On the display.

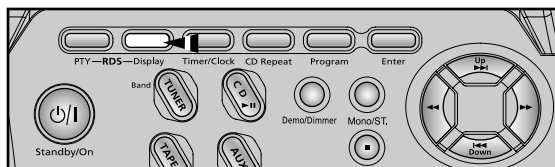


### About CT(Clock Time)

➤ Sets the time of RDS clock.

To select the CT time, set the RDS Display button to CT MODE.

 - ◆ The CT information will take up to 2 minutes to be decoded therefore the clock isn't displayed immediately.
- ◆ If there is no received CT information, "NO CT" is displayed.

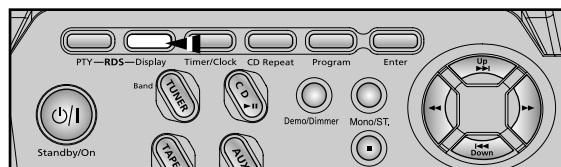

# PTY (Program Type) indication and PTY-SEARCH function



- ◆ The PTY information is composed of an identification symbol, which helps the FM radio to recognize the program type of each FM station.
- ◆ The 30 PTY modes are shown in the display by pressing the PTY button.

 
Display	Program Type
NEWS	• News including an announced opinion and report
AFFAIRS	• Several matters including a current incident, documentary, discussion and analysis.
INFO	• Information including weights and measures, returns and forecast, matters interesting the customer, medical information, etc.
SPORT	• Sports
EDUCATE	• Education
DRAMA	• Drama-Radio serial, etc.
CULTURE	• Culture-National or local culture including the religious problem, social science, language, theater, etc.
SCIENCE	• Natural science and technology
VARIED	• Others-Speech, amusing program (quiz, game), interview, comedy and satirical play, etc.
POP M	• Pop music
ROCK M	• Rock music
M.O.R.M	• M.O.R.- Comfortable music, occasionally vocal or piece
LIGHT M	• Light classical music- Classical music and instrumental and chorus music
CLASSICS	• Heavy classical music-Orchestra music, symphony, chamber music and opera
OTHER M	• Other music - Jazz, R&B country music
WEATHER	• Weather
FINANCE	• Finance
CHILDREN	• Children's programmes
SOCIAL A	• Social affairs
RELIGION	• Religion
PHONE IN	• Phone in
TRAVEL	• Travel
LEISURE	• Leisure
JAZZ	• Jazz Music
COUNTRY	• Country Music
NATIONAL	• National Music
OLDIES	• Oldies Music
FOLK M	• Folk Music
DOCUMENT	• Documentary
TEST	• Alarm Test

## About PTY-SEARCH

- 1 Tuned to an **FM** station broadcasting a PTY MODE.
  - ◆ See the **FM** receiving method on the **page 13**.
  - ◆ If the received station is transmitting the RDS information, "RDS" lights up.
- 2 Press the **PTY** button.
  - ◆ The PTY MODE(NEWS, AFFAIRS, etc) appears on the display.
  - ◆ Press the **Tuning Mode Down** or **Up** button to select the desired PTY MODE.

- ◆ If the station is transmitting no PTY information, 'NO PTY' shows on the display.
- ◆ When the PTY MODE is selected(The PTY MODE is shown in the display), press the PTY KEY once again to convert into PTY-SEARCH MODE and auto-search the station sequentially.
- ◆ If a station is found broadcasting required PTY MODE then the search station and the stop is selected.

- ☞ ◆ If the PTY MODE isn't found it is retuned to the original station frequency at beginning the PTY SEARCH and auto-search and PTY SEARCH are suspended.

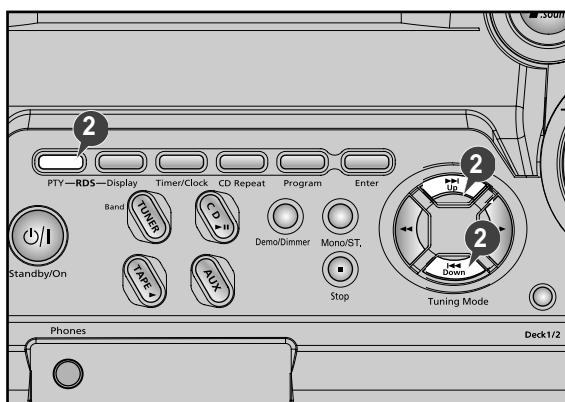

## Listening to a Cassette

- Always treat your cassettes with care; refer, if necessary, to the section entitled "Precautions When Using Audio Cassettes" on page 23.

 
- 1 Switch the system on by pressing the **Standby/On** button.
  - 2 Select the **TAPE** function by pressing **TAPE**.
  - 3 Open either cassette deck 1 or 2 by pushing and releasing the deck cover where **PUSH EJECT** (▲) is written.
  - 4 Insert the pre-recorded cassette with the open edge of the tape facing downward.
  - 5 Close the deck by pushing on it until it clicks into place.  
**Result:** Depending on the deck selected, the 1 or 2 indication is displayed in front of the counter number.
- If you insert a cassette in both decks, the system selects the deck in which you inserted the second cassette.
- 6 If you have inserted two cassettes, press **Deck 1/2** on the front panel or directly the **Deck 1/2** button on the remote control to select the cassette to be played.  
**Result:** Depending on the deck selected, the **TAPE 1 (TAPE A)** or **TAPE 2 (TAPE B)** indication is displayed.

To listen to...	Press ...
Side A,B .....	<b>TAPE</b> (▶)

**Result:** The cassette starts playing.

When the cassette is stopped, select one of the following functions as required.

To...	Press ...
Rewind the cassette .....	◀◀
Fast-forward the cassette .....	▶▶

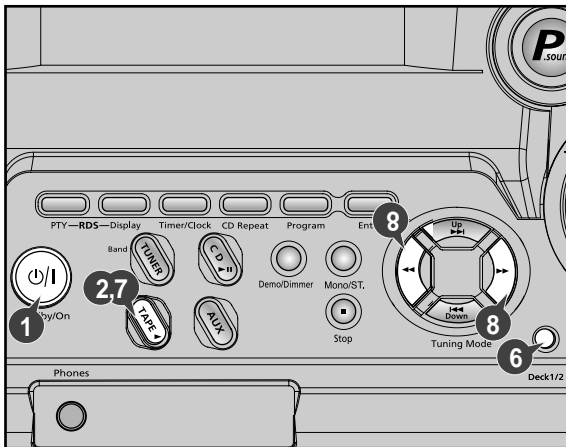


## CD Synchro Record Feature

You can record a compact disc on a cassette in two different ways:  
 ♦ Synchronised recording

♦ Direct recording  
 This feature enables you to synchronize the start of the recording with the start of the disc or track of your choice.

- 1 Switch the system on by pressing **Standby/On**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **CD** function by pressing **CD** on the front panel.
- 4 Load a compact disc.
- 5 Select the required disc.
- 6 Select the required track and press **CD Synchro** or press **CD Synchro** directly to start recording at the beginning of the disc.  
**Result:** "REC" (Only **MAX-B450**) and "CD SYNC" are displayed and recording starts.

 To stop...	Press ...
Recording and playing the compact disc .....	■

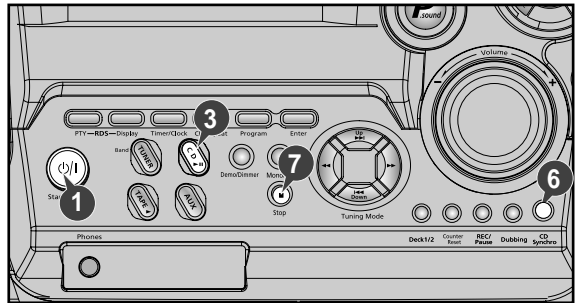


## Recording a Compact Disc

The direct recording mode enables you to start recording with any track on the compact disc.

- ♦ You can only record on cassettes in Deck 2.
- ♦ You do not need to adjust the volume, as it has no effect on the recording.

 - 1 Switch your system on by pressing **Standby/On**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **CD** function by pressing **CD** on the front panel.
- 4 Load the compact disc.
- 5 Select the required disc.
- 6 Select the required track on the compact disc and press ▶|| on the front panel or ▶|| on the remote control to set the compact disc player to Pause mode.
- 7 Press the **REC/Pause**.  
**Result:** REC is displayed.
- 8 Press the ▶|| to start playing the track.  
**Result:** The track is recorded on the cassette.
- 9 When you have finished recording, press **TAPE** ■ on the remote control or ■ on the front panel to stop recording.

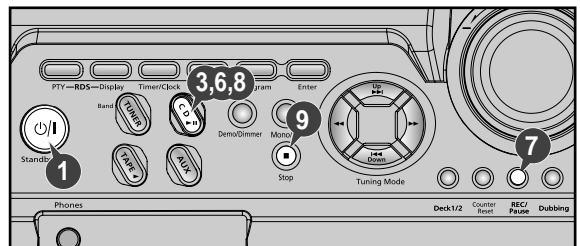



## Recording a Radio Programme

You can record a radio programme of your choice.

- ◆ You can only record on cassettes in Deck 2.
- ◆ You do not need to adjust the volume, as it has no effect on the recording.

- 1 Switch the system on by pressing **Standby/On**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **TUNER** function by pressing **TUNER**.
- 4 Select the radio station that you wish to record by pressing **Tuning Up** or **Tuning Down** on the remote control or by press the **Tuning Down** or **Up** on the front panel.
- 5 Press **REC/Pause**.  
**Result:** REC is displayed in red and recording starts.
- 6 When you have finished recording, press the **TAPE** on the remote control or on the front panel to stop recording.

  - 5 Press **■** on the front panel or **TAPE ■** on the remote control when you have finished recording.

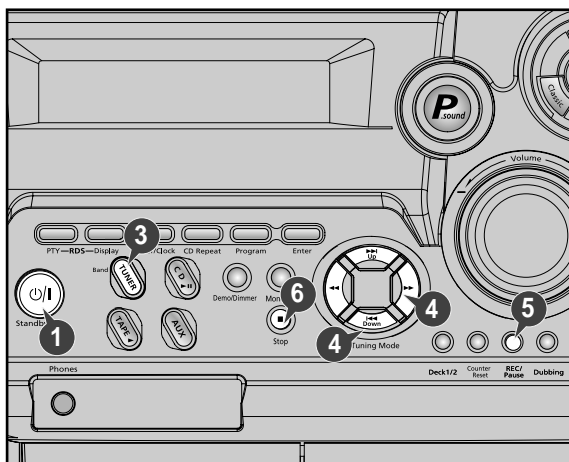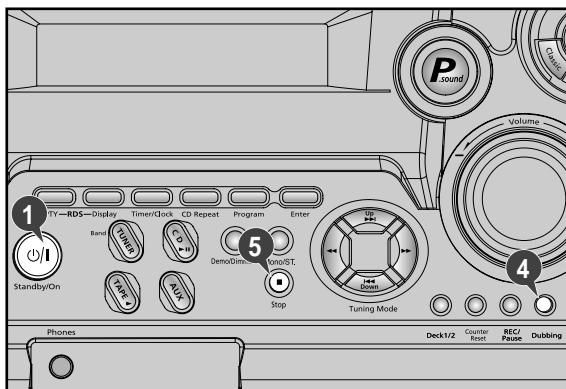

## Copying a Cassette (Dubbing)

You can copy a cassette from Deck 1 to Deck 2.

- ◆ Normal speed dubbing
- ◆ You do not need to adjust the volume, as it has no effect on the recording.
- ◆ Take care not to insert the tape to be copied in Deck 2, as it will be erased when you start recording.

- 1 Switch your system on by pressing **Standby/On**.
- 2 Insert a blank cassette in Deck 2.
- 3 Insert the tape to be copied in Deck 1.
- 4 **To copy a cassette at...** **Press...**  
Normal speed dubbing ..... Dubbing

 
**Result:** The appropriate indications are displayed and the cassette in Deck 1 is copied to the cassette in Deck 2.

## Tape Counter

*When playing a cassette, a counter is displayed to enable you to take note of the counter value at the start of each track and thus start playback at the beginning of the track to which you wish to listen.*

➤ The counter is only displayed when a cassette is being played.

Before starting to record a cassette for which you wish to take note of the counter values at the beginning of each track, reset the counter by pressing **Counter Reset**.

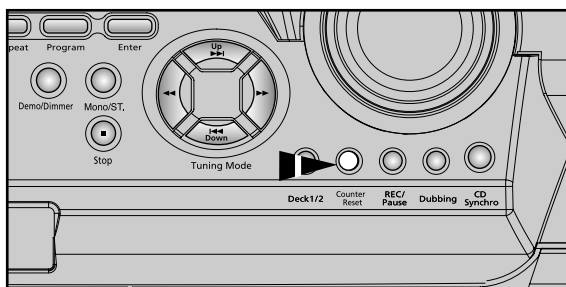

# Timer Function

The timer enables you to switch the system on or off at specific times.

**Example:** You wish to wake up to music every morning.

➤ If you no longer want the system to be switched on or off automatically, you must cancel the timer.

⚡ ♦ Before setting the timer, check that the current time is correct.

 
♦ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1 Switch the system on by pressing **Standby/On**.
- 2 Press **Timer/Clock** until **⌚ TIMER** is displayed.
- 3 Press **Enter**.  
**Result:** **ON TIME** is displayed (instead of the equalizer symbols) for a few seconds, followed by any switch-on time already set; you can set the timer switch-on time.
- 4 Set the timer switch-on time.
  - a Set the hour by pressing the **⏮ / ⏭** buttons.
  - b Press **Enter**.  
**Result:** The minutes flash.
  - c Set the minutes by pressing the **⏮ / ⏭** buttons.
  - d Press **Enter**.  
**Result:** **OFF TIME** is displayed (instead of the equalizer symbols) for a few seconds, followed by any switch-off time already set; you can now set the timer switch-off time.
- 5 Set the timer switch-off time.
  - a Set the hour by pressing the **⏮ / ⏭** buttons.
  - b Press **Enter**.  
**Result:** The minutes flash.
  - c Set the minutes by pressing the **⏮ / ⏭** buttons.
  - d Press **Enter**.  
**Result:** **VOL XX** is displayed, where **XX** corresponds to the volume already set.
- 6 Press **Tuning Down** and **Up** to adjust the volume level and press **Enter**.  
**Result:** The source to be selected is displayed.
- 7 pressing the **⏮ / ⏭** buttons to select the source to be played when the system switches on .

If you select...	You must also...
TAPE (cassette).....	Insert a recorded cassette in one of the decks before setting the system to standby.
TUNER (radio).....	<ol style="list-style-type: none"> <li>a Press <b>Enter</b>.</li> <li>b Select a preset station by pressing the <b>⏮ / ⏭</b> buttons.</li> </ol>
CD (compact disc).....	Load one or more compact discs.

- 8 Press **Enter** to confirm the timer.
- 9 Press **Standby/On** to set the system to standby mode.  
**Result:** **⌚** appears on the front panel display next to the time, indicating the timer has been set. The timer automatically turns the system on or off at a designated time.

➤ If the timer switch on and off times are identical, the word **ERROR** is displayed.

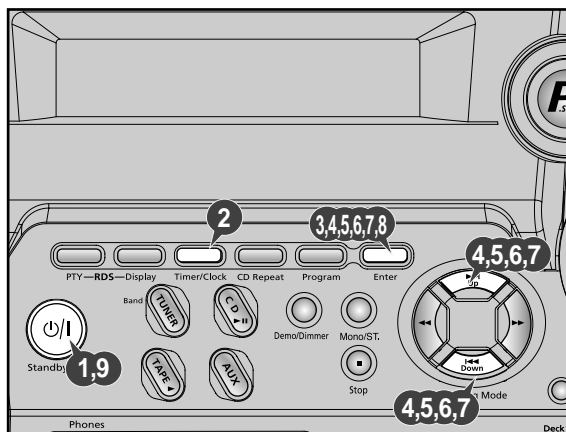

➤ To set the timer function

♦ You can also use Program/Set button on the remote control to instead Enter button in step 3, 4, 5, 6, 7, 8.




## Cancelling the Timer

 After having set the timer, it will start automatically as shown by the **TIMER** indication on the display. If you no longer wish to use the timer, you must cancel it.

- You can stop the timer at any time (system on or in standby mode).

To...	Press Timer-On/Off...
Cancel the timer .....	Once. Result:  is no longer displayed.
Restart the timer .....	Twice. Result:  is displayed again.

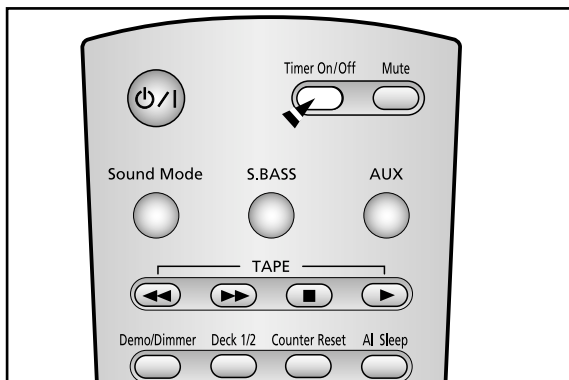


## Selecting an Equalizer Preset

Your mini-compact system is equipped with a preset equalizer that allows you to choose the most appropriate balance between treble and bass frequencies, according to the type of music you are listening to.

Press EQ Preset (**Pop/Rock/Classic**) on the front panel or **Sound Mode** on the remote control until the required option is selected.

 To obtain a...	Select...
Normal balance (linear) .....	PASS
Balance suitable for pop music .....	POP
Balance suitable for rock music .....	ROCK
Balance suitable for classic music .....	CLASSIC

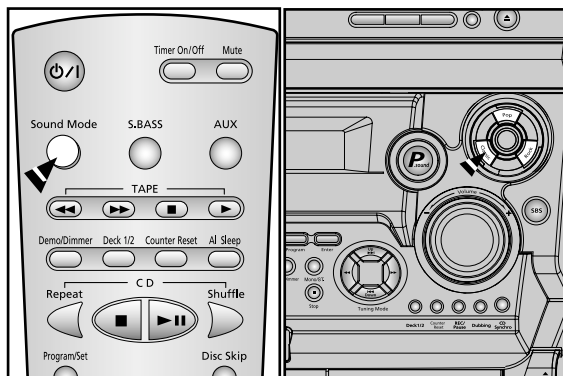


## Mute Function

You can turn the sound off temporarily on your system.

Example: You wish to answer a telephone call.

 - 1 Press Mute.
- 2 To switch the sound back on (at the same volume as before), press **Mute** again or the **Volume** buttons.

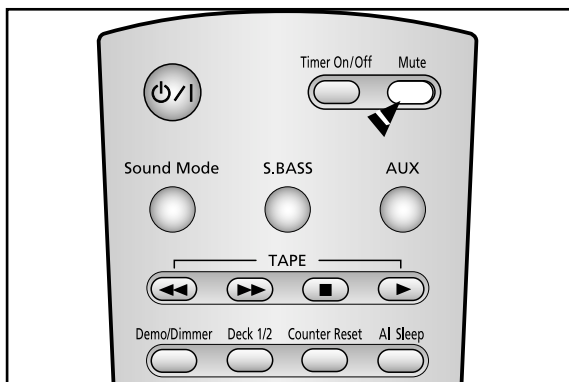


## Power Sound Function

Your mini-compact system is equipped with the function of Power Sound .

The function of Power Sound amplifies bass and improves high key or bass twice as much for you to appreciate powerful real sound.

 - 1 Press the **P.Sound** button on the front panel.  
Result: Press **P.Sound** button on the front panel, "**P.SOUND**" is displayed.
- 2 To cancel this function, press **P.Sound** button again .

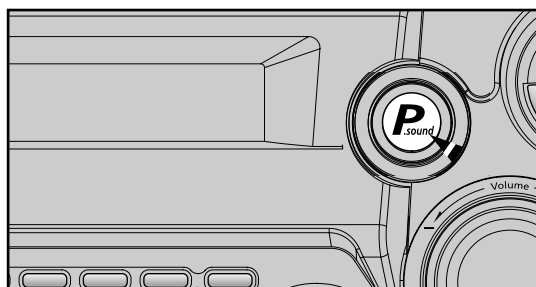




## Setting the System to Switch off Automatically

While listening to a compact disc or a cassette, you can set the system to switch off automatically.  
**Example:** You wish to go to sleep to music.

 
- 1 Press **AI Sleep**.  
**Result:** playback starts and the following indications are displayed:  
**90 MIN**
- 2 Press **AI Sleep** one or more times to indicate how long the system should continue playing before it switches off:  
  - At any time, you can:
    - ◆ Check the remaining time by pressing **AI Sleep**
    - ◆ Change the remaining time by repeating Steps 1 and 2
- 3 Press **AI Sleep** one or more times until **AI SLEEP** is displayed.  
**Result:** The system will automatically switch off at the end of disc or cassette.
- 4 To cancel SLEEP or AI OFF function, press **AI Sleep** one or more times until **OFF** is displayed.

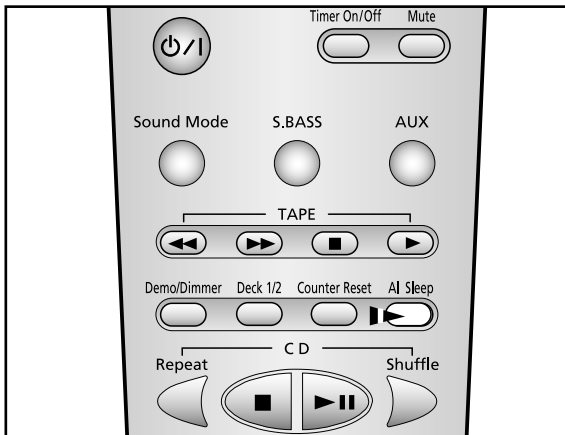

## Super Bass Sound

Your mini-compact system has a bass amplification function called SBS (Super Bass Sound). This function makes the sound more powerful and real.

 - 1 Press the **SBS** button on the front panel.  
**Result:** **S. BASS** (or **BASS**) is displayed and "SBS ON" is displayed for a few seconds.
- 2 To cancel this function, press **SBS** again, "OFF" is displayed for a few seconds.

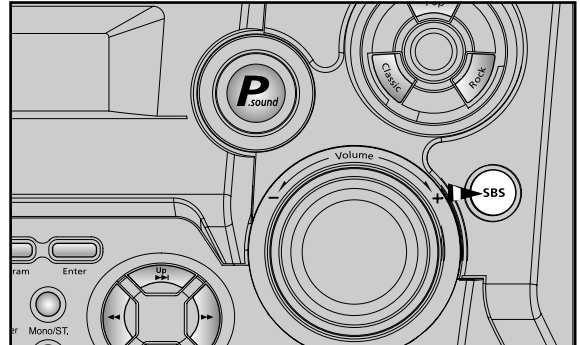


## Connecting Headphones

You can connect a set of headphones to your mini-compact system so that you can listen to music or radio programmes without disturbing other people in the room. The earphones must have a 3.5 ø jack or an appropriate adapter.

Connect the headphones to the **Phones** jack on the front panel.  
**Result:** The loudspeakers are no longer used to output the sound.

 ⚠ Prolonged use of headphones at a high volume may damage your hearing.

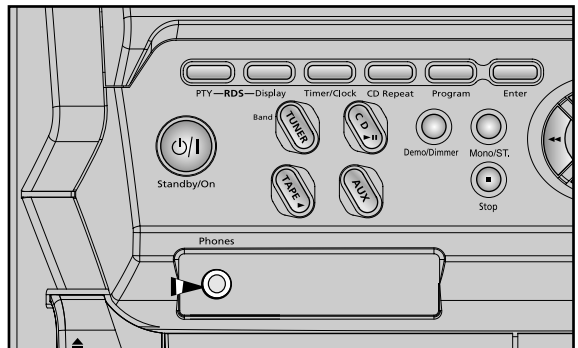

## Connecting to an External Source

GB

The auxiliary input can be used to take advantage of the sound quality of your mini-compact system when listening to other sources.

- Examples:**
- ◆ A television
  - ◆ A video disc player
  - ◆ A DAT or DCC cassette player
  - ◆ A Hi-Fi stereo video cassette recorder

- To connect the external source, the source must have an audio output. In addition, you need an RCA connection cable.

- 1 Set the system to standby mode and disconnect it and the external source from the main.
- 2 Connect the audio cable to the rear of the mini-compact system.

 
**Connect the...** **To the connector marked...**

Red jack ..... R (right)  
White jack ..... L (left)

- For optimum sound quality, do not invert the right and left channels.


- 3 Plug the system back into the main socket and press **Standby/On** to switch it on.
- 4 Select the **AUX** source by pressing **AUX** on the front panel.  
**Result:** **AUX** is displayed.
- 5 Switch the external source on.
- 6 Adjust the volume and balance as required:  
◆ Volume ◆ Equalizer

**Example:** You can watch a film and take advantage of stereo sound provided that the original sound track is in stereo, (as if you were in a cinema).

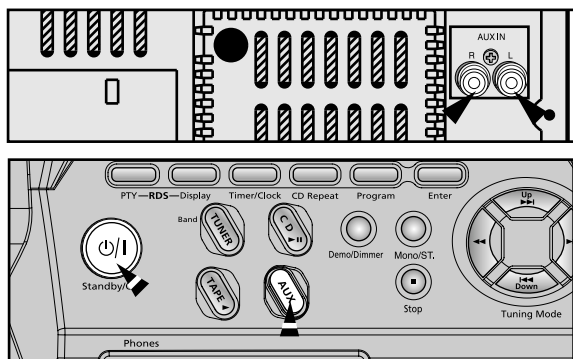


## Safety Precautions


The following diagrams illustrate the precautions to be taken when using or moving your mini-compact system.

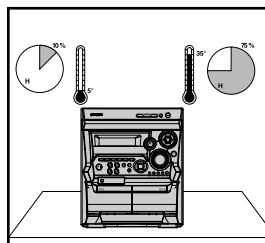 

 
Ambient operating conditions:  
Ambient temperature 5°C-35°C  
Humidity 10-75%

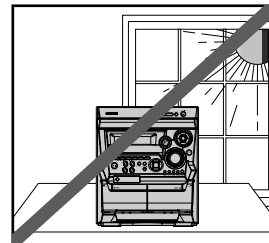

 
Do not expose the unit to direct sun radiation or other heat sources. This could lead to overheating and malfunction of the unit.

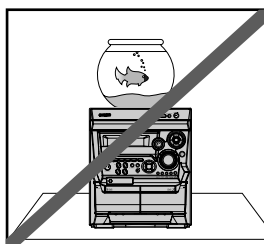

 
Do not place potted plants or vases on top of the unit. Moisture entering the unit could lead to dangerous electric shock and can cause equipment damage. In such events immediately disconnect the main plug from the socket.

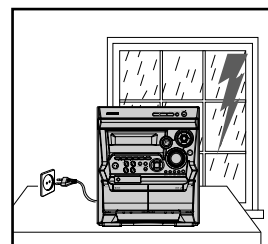

 
During thunderstorms, disconnect the main plug from the socket. Main voltage peaks due to lightning could damage the unit.

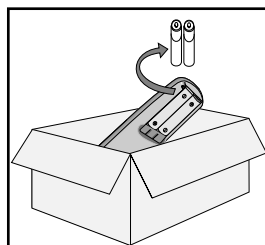

 
Remove the batteries from the remote control, if not used for any extended periods. Leaking batteries can cause serious damage to the remote control.

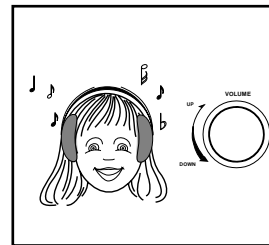

 When using headphones, take care not to listen at excessive volumes. Extended use of headphones at high volumes will lead to hearing damage.

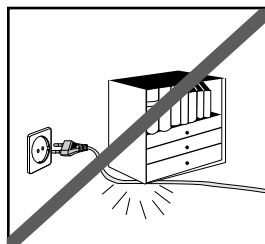

 Do not place heavy items on the main lead. Main cable damage can lead to damage of the equipment (fire hazard) and can cause electric shock.

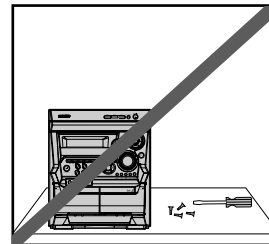

Do not remove any equipment panels. The inside of the unit contains live components, which cause electric shock.

## Cleaning Your Mini-Compact System

To obtain the best possible results from your mini-compact system, you must clean the following elements regularly:

- ◆ The outer casing
- ◆ The compact disc player
- ◆ The cassette players (heads, rollers and drive capstans)
- ☛ Always unplug the system from the wall outlet:
  - ◆ Before cleaning it
  - ◆ If you are not going to be using it for a long time

### Outer Casing

 
Clean the outer casing regularly using a soft cloth and a light detergent. Do not use abrasive powders, liquids or aerosol cleaners. Never let any liquids get into the system.

### Compact Disc Player


- 1 Before playing a compact disc, clean it with a special CD cleaning agent. Do not use the same cleaning agents as for vinyl LP records. Carefully wipe the disc from the centre outward.
- 2 Regularly clean the player with a special cleaning disc (available from your local dealer).


### Tape Decks

- 1 Press PUSH EJECT(▲) to open the cassette deck.
  - 2 Use a cotton bud and a special cassette cleaning agent to clean the:
    - ◆ Head (1)
    - ◆ Rollers (2)
    - ◆ Drive capstans (3)
- ☛ If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.
- ◆ Although your system is very hard-wearing, it should not be used in an excessively dusty environment or subjected to shocks or extreme heat (close to heating appliances or in direct sunlight, etc.).
- ◆ If the unit emits an unpleasant odor when in use, unplug it from the main supply and contact the after-sales service.

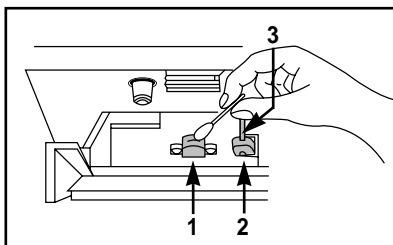

## Precautions When Using Compact Discs

 - ◆ Handle your compact discs with care. Always hold them by the edges to avoid leaving fingerprints on the shiny surface.
- ◆ When you have finished playing a compact disc, always put it back in its case.
- ◆ Do not fix paper or adhesive tape to the discs and do not write on the label.
- ◆ Clean them with a special-purpose cloth.
- ◆ Store your compact discs in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Always use compact discs marked .

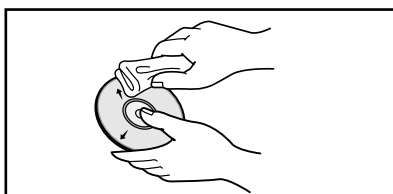

## Precautions When Using Audio Cassettes

- ◆ Check that the tape in the cassette is sufficiently taught.
- ◆ To prevent erasing a cassette that you wish to keep, remove the safety tab on the upper edge of the cassette. To record a cassette, where the tab has been broken, simply cover the opening with adhesive tape.
- ◆ When you have finished playing a cassette, always put it back in its case.
- ◆ Store your cassettes in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Avoid using 120-minute cassettes as they place unnecessary strain on the tape mechanism.

## Before Contacting the After-Sales Service

It always takes a little time to become familiar with a new appliance. If you have any of the problems listed below, try the solutions given. They may save you the time and inconvenience of an unnecessary service call.

	Problem	Checks/Explanation
GENERAL	The system does not work	<ul style="list-style-type: none"> <li>• The main lead is not correctly plugged into a wall socket or the wall socket is not switched on.</li> <li>• The remote control batteries need replacing or the polarity has not been respected.</li> <li>• The Standby/On button has not been pressed.</li> </ul>
	There is no sound	<ul style="list-style-type: none"> <li>• The volume has been completely turned down.</li> <li>• The correct function (TUNER, CD, TAPE, AUX) has not been selected.</li> <li>• You have connected a set of earphones.</li> <li>• The loudspeaker wires have been disconnected.</li> <li>• The MUTE button has been pressed.</li> </ul>
	The Timer does not work	<ul style="list-style-type: none"> <li>• The timer has been stopped by pressing <b>TIMER ON/OFF</b>.</li> </ul>
	System still doesn't work, even after following steps above.	<ul style="list-style-type: none"> <li>• Press the <b>SBS</b> button for 5 seconds in power 'OFF'(standby), the system is returned the original position (<b>RESET</b>)</li> </ul>
CD	The compact disc player does not start playing	<ul style="list-style-type: none"> <li>• The CD function has not been selected.</li> <li>• The disc has been inserted face down or is either dirty or scratched.</li> <li>• The laser sensor is dirty or dusty.</li> <li>• The system has not been installed on a flat, horizontal surface.</li> <li>• Condensation has formed in the player; leave the system in a warm, airy room for at least one hour.</li> </ul>
	The tape does not start playing	<ul style="list-style-type: none"> <li>• The TAPE function has not been selected.</li> <li>• The cassette has not been inserted correctly.</li> <li>• The cassette player has not been closed.</li> <li>• The tape is either slack or broken.</li> </ul>
CASSETTES	The volume falls off	<ul style="list-style-type: none"> <li>• The audio heads are dirty.</li> <li>• The rollers or drive capstans are dirty.</li> <li>• The tape is worn.</li> </ul>
	The cassette is not erased correctly There is excessive wow and flutter	<ul style="list-style-type: none"> <li>• The TUNER function has not been selected.</li> <li>• The radio frequency has not been correctly selected.</li> </ul>
RADIO	Reception is poor or no radio stations are received at all	<ul style="list-style-type: none"> <li>• The aerial has been disconnected or is not facing the right way. Turn it until you find the best orientation.</li> <li>• You are in a building that blocks radio waves; you must use an outside aerial.</li> </ul>

If the above guidelines do not allow you to solve the problem, take a note of:

- ◆ The model and serial numbers, normally printed on the rear of the system
- ◆ Your warranty details
- ◆ A clear description of the problem

Then contact your local dealer or SAMSUNG after-sales service.

## Technical Specifications

GB

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

---

### RADIO

#### **LW(option)**

Usable sensitivity	60 dB
--------------------	-------

#### **AM (MW)**

Signal/noise ratio	40 dB
--------------------	-------

Usable sensitivity	54 dB
--------------------	-------

Total harmonic distortion	2 %
---------------------------	-----

#### **FM**

Signal/noise ratio	62 dB
--------------------	-------

Usable sensitivity	10 dB
--------------------	-------

Total harmonic distortion	0.3 %
---------------------------	-------

---

### COMPACT DISC PLAYER

Capacity	3 discs
----------	---------

Frequency range	20 Hz - 20 KHz ( $\pm 1$ dB)
-----------------	------------------------------

Signal/noise ratio	90 dB (at 1 KHz) with filter
--------------------	------------------------------

Distortion	0.05 % (at 1 KHz)
------------	-------------------

Channel separation	74 dB
--------------------	-------

Disc sizes	Diameter: 120 or 80 mm. Thickness: 1.2 mm
------------	---

---

### TAPE DECK

Frequency range	125 Hz ~ 8 KHz
-----------------	----------------

Signal/noise ratio	40 dB
--------------------	-------

Channel separation	35 dB
--------------------	-------

Erasing effect	50 dB
----------------	-------

---

### AMPLIFIER

Output power (6 $\Omega$ )	2 x15 Watts RMS,IEC (total harmonic distortion: 10 %) (MAX-B420)
----------------------------	---

Output power (6 $\Omega$ )	2 x25 Watts RMS,IEC (total harmonic distortion: 10 %) (MAX-B450)
----------------------------	---

Channel separation	45 dB
--------------------	-------

Signal/noise ratio	75 dB
--------------------	-------

---

### GENERAL

Dimensions	270 (W) x 317 (H) x 370 (D) mm
------------	--------------------------------

---

THIS APPLIANCE IS MANUFACTURED BY:

